



# SuperMini

Owner's Guide

# Welcome

Thank you for purchasing the SuperMini High-Res Portable Music Player by HIFIMAN, a leading designer/manufacturer high performance audio products. This owner's guide is intended to provide a useful overview of the player and its features. Please review it thoroughly to help you get years of enjoyment, safety and reliability from your SuperMini High-Res Portable Music Player.

## Contents

Quick Guide	02
Function Buttons	03
Operation	04
Specifications	07
Other Information	09
Warranty	11
Customer Service	13

# Quick Guide


---

1. The SuperMini supports TF card capacity up to 256GB.
2. Insert the TF card into the slot at the bottom of SuperMini.
3. A quick formatting may be needed if the card is larger than 32G. Please find the formatting option in "Setting" menu.
4. Connect the SuperMini to PC via USB cable.
5. Copy music files/folder into TF card.
6. Eject SuperMini from PC, then unplug the cable.
7. Insert jack of earphones, headphones or pre-amplifier according to your need.
8. Power on. Select "All Songs" , then update Media Library.

Now, you can enjoy music with SuperMini!

# Function Buttons

---

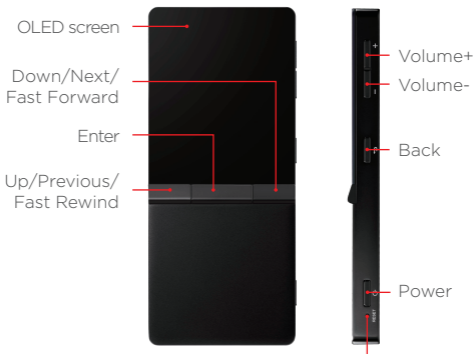

Reset (use a hair pin to press if needed)



# Operation

---

## Power Button

1. Press 3 seconds to shutdown or turn on the player.
2. Quick press once to lock the screen, press again to unlock.

## Enter Button

1. Play current music or make a selection.
2. In Playing View, quick press to Pause/Play.
3. In Playing View, long press for 3 seconds to access control interface
4. In the Artist/Album/Genre/All songs menu, long press for 3 seconds to "Add/Exit Favorites"
5. In the Favorites menu, long press for 3 seconds to "Delete Files/Empty the Favorites Folder/Exit"

<

1. View contents and folders.
2. In Playing View, long press to fast rewind.
3. In Playing View, quick press to repeat the current track from the beginning after playing the song for more than 3 seconds or go to previous track.

# Operation

---

>

1. View contents and folders.
2. In Playing View, long press to fast forward.
3. In Playing View, quick press to play next track.

## Back Button

1. Quick press to go back.
2. Long press to switch between Playing View and Main Menu when playing a title.

Other Details:

OLED Screen displays content and information.

Volume: Press “+” or “-” to adjust volume from 0 to 32 (high volume can be harmful for your ears).

USB Port

1. Use the supplied USB cable to connect the player to your computer to copy/delete your files.
2. Use the USB cable to connect to the computer or 5V1A charger when the battery is low.

# Operation

---

## Headphone Connector / Jack

1. The 3.5mm 4 pin balanced jack is designed to connect balanced headphones with 3.5mm plug.
2. The 3.5mm 3 pin is designed to connect normal headphones with 3.5mm plug.
3. Can be connected to speakers or other compatible devices (additional purchase of cables is required).

## Reset Hole

In case of system crash, press Reset to reactivate the player (use a hair pin to press if needed).



# Specifications

---

Dimensions: 4.09" x 1.77" x 0.33"      Frequency Response:  
(104.0 x 45.0 x 8.5mm L x W x H)      20Hz - 20kHz  
Weight: 2.4oz. (70g)      THD: 0.04%  
Battery Life: 22 hours      S/N: 102 ± 3 dB  
(might vary depending      TF Memory Card : 256GB  
on the music format selected).

## Supported Lossless Music Formats

	WAV	FLAC	ALAC	APE (Fast.High Normal)	AIFF (aif-f)	DFF	DSF
16bit 44.1kHz	✓	✓	✓	✓	✓	-	-
16bit 48kHz	✓	✓	✓	✓	✓	-	-
16bit 88.2kHz	✓	✓	✓	✓	✓	-	-
16bit 96kHz	✓	✓	✓	✓	✓	-	-
16bit 176.4kHz	✓	✓	✓	✗	✓	-	-
16bit 192kHz	✓	✓	✓	✗	✓	-	-
24bit 44.1kHz	✓	✓	✓	✓	✗	-	-
24bit 48kHz	✓	✓	✓	✓	✗	-	-
24bit 88.2kHz	✓	✓	✓	✓	✗	-	-
24bit 96kHz	✓	✓	✓	✓	✗	-	-
24bit 176.4kHz	✓	✓	✓	✗	✗	-	-
24bit 192kHz	✓	✓	✓	✗	✗	-	-
1bit 2.8MHz (DSD64)	-	-	-	-	-	✓	✓

Other Music Formats: MP3, OGG, AAC, WMA

# Specifications

---

Accessories:

Micro-USB Cable x 1

Pair of Earphones x 1

Warranty Card x 1

TF card is not included.

The accessories in the package are subject to change without further notice.

# Other Information

---

## Safety Caution

1. Keep the player away from rain, water, drinks, chemicals and cosmetics, etc. Humidity and liquids may damage the player or cause it to malfunction.
2. Do not expose the player to humidity, heavy smoke or dust.
3. SuperMini is designed to work in ambient temperatures between  $-6^{\circ}$  and  $40^{\circ}\text{C}$  and stored at  $25^{\circ}\text{C}$ .
4. Do not use any chemicals or detergents to clean the player.
5. It is recommended not to use headphones while riding, driving or operating motor vehicles.
6. If you experience ringing in your ear, please reduce the volume or turn off the player.

## Other Information

---

### Disposal and Recycling

The disposal of your player should be separated from household waste because the player contains electronic parts and battery. When your player reaches its end of life, please contact your local environmental department for disposal and recycling information or you could simply send it back to us. The battery will be removed and properly recycled.

European Union—Disposal information:



This symbol means that according to local laws and regulations your product should be disposed of separately from household waste. When this product reaches its end of life, take it to a collection point designated by local authorities. Consumers can be punished by penalty for inappropriate disposal of electronic device. The separate collection and recycling of your product at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

# Warranty

---

Your HIFIMAN product is warranted for a period of twelve (12) months beginning with the original date of purchase. Your dated sales or delivery receipt, is your proof of purchase. You may be required to provide proof of purchase as a condition of receiving warranty service so please keep it handy.

If your product is under warranty and some malfunctions appear, please contact HIFIMAN customer service or your authorized dealer. If necessary, and at our discretion, we will provide a warranty repair or replacement of your product.

Caution: do not disassemble or modify the product in any way. Tampering with or modifying your HIFIMAN product will void its warranty.

## **This Limited Warranty does not apply to :**

1. Defective or discolored parts if the damages are caused by fluids, dirt, missing keys, broken plastic parts or improper use.

# Warranty

---

2. Damage caused by misuse with another product.
3. Use of the product for other than its normal intended use, including, without limitation, failure to use the product in accordance with the supplied "Owner's Guide"
4. Damage caused by accident, abuse, neglect or misuse.
5. If you do not have a valid dated receipt showing proof of purchase.
6. Damage caused by services/repairs or other modifications to the system carried out by anyone other than HIFIMAN or an authorized HIFIMAN distributor or dealer.
7. Damage caused by self-repair or if the unit has been disassembled or modified in any way.

The warranty applies to the first purchaser and is not transferable. Should you need warranty service please contact us using the information shown in the "Contact" section.

# Customer Service

---

If you have any concerns with your product: please contact us to explain the issue in detail. If a return/refund is required, a RA# will be issued. Return shipping to HIFIMAN or authorized service facility is done at the owner's expense.

**For any further information or questions, please contact your authorized HIFIMAN dealer. Or email us directly at [customerservice@HIFIMAN.com](mailto:customerservice@HIFIMAN.com).**



[facebook.com/hifimanelectronics](https://facebook.com/hifimanelectronics)



[twitter.com/hifimanofficial](https://twitter.com/hifimanofficial)



[www.hifiman.com](http://www.hifiman.com)



**HIFIMAN**

Innovating the Art of Listening



Innovating the Art of Listening