



Innovating the Art of Listening

EF500

Balanced Headphone Amplifier and DAC

HYMALAYA **LE**



User Guide

Hello

Thank you for choosing the HIFIMAN EF500, our flagship amplifier/DAC.

This Owners Manual will provide a helpful overview and familiarize you with the product's features and proper usage.

Description

HIFIMAN is a world-famous manufacturer specializing in high-end audiophile-grade products. The company's expert R&D team features industry professionals with extensive experience in "voicing" high-end headphones and electronics.

Following the success of the EF600, HIFIMAN introduces the EF500, designed for audiophile-grade desktop performance. Featuring HIFIMAN's acclaimed R2R Himalaya LE DAC, EF500 features an industrial design that is elegant, sleek, and compact, making it easy to add to a desktop system, side table, or anywhere else in a room.



Table of Contents

03	Important
04	Specifications
04	In-box Accessories
05	Front Panel Layout
06	Real Panel Layout
07	Bottom Panel Layout
08	Connect to PC or Mobile phone via USB cable
09	HIFIMAN Limited Warranty

Important

1. Power voltage varies depending upon the region. Before connecting this product to a power source for the first time, please make sure the rated voltage on the panel corresponds to local voltage requirements. If not, the power supply should be turned off and the power cable disconnected before adjusting the voltage selector to conform to local standards. The value displayed on the voltage switch is the current voltage.
2. Firmly grasp the plug when the power cable is being unplugged. Do not pull the cable to unplug.
3. Do not operate with wet or oily hands.
4. This product should not be placed in a dusty, dirty environment. Never expose it to high humidity.
5. The plug should be unplugged if the product will not be used for an extended period.
6. Do not reverse the L/R channel while connecting with the audio devices.
7. To avoid hearing loss, always maintain a moderate listening volume when using headphones /earphones.
8. Be careful to ensure the EF500 is used only by adults who understand the proper option. Keep the Amp/DAC away from children. Likewise, high temperatures and potentially damaging chemicals and solvents such as butane lighters, gasoline, insecticides, etc. may cause irreparable damage to the EF500.
9. This product should not be disassembled or refitted by anyone other than HIFIMAN.
10. In the following situations, please disconnect the power supply from the product and contact HIFIMAN customer service.:
 - A. The power cable or plug is damaged.
 - B. The product has fallen to the ground or liquid has spilled into or on the equipment.
 - C. The product was exposed to an extremely humid environment.
 - D. The product does not seem to operate properly, or there is a noticeable change in performance.

Specifications

THD+N (Line out) : 0.0025% (-8dB)
Channel Separation: 131±3dB
Signal to Noise Ratio: 117dB (A Weighted)
Max Power Output: 4.5 WPC@32Ω balanced/
1.32 WPC@32Ω unbalanced
Weight: ~3.37kg

Dimension: see below graphic for all details
HIFIMAN KUNSHAN TECHNOLOGY GROUP CO., LTD
100-120Vac/210-230Vac, 50/60Hz, 45W Max
Manufacturer's specified Tma: 50°C;
Altitude during operation: 2500m



In-box Accessories

Power Cable x1

Note: Specifications and features are subject to change without notice.

Front Panel Layout



*** When operates the 4-level function switch,**
the corresponding functions of the LED lights (white) are:
High Gain NOS, High Gain OS, Low Gain OS, Low Gain NOS

Real Panel Layout



Bottom Panel Layout



AC 115V/230V
Voltage Selector

Important:

Power voltage varies depending upon the region. Before connecting this product to a power source for the first time, please make sure the rated voltage on the panel corresponds to local voltage requirements. If not, the power supply should be turned off and the power cable disconnected before adjusting the voltage selector to conform to local standards. The value displayed on the red voltage switch is the current voltage.

Connect to PC or Mobile Phone via USB Cable

Connect to PC

1. Connect the HIFIMAN EF500 to a PC with the appropriate USB cable.
(Note: USB charging cable is not applicable.)
2. When connected the PC will recognize the device. Confirm the HIFIMAN device is selected. If the device is not recognized, go to the PC's settings, search for Sound, and select the corresponding output device.
3. Launch the music application on your computer and enjoy.

* Note: For macOS, WIN10 and above, direct connection is quick and immediate.
For WIN XP and older, please visit <http://hifiman.com/services> to download the appropriate driver.

Connect to Mobile Phone

1. Connect the HIFIMAN EF500 to a mobile phone with the appropriate USB cable.
(Note: USB charging cable is not applicable.)
2. Confirm setup connection: The mobile phone should automatically recognize the device. If not, go to Developer Options and enable the USB Debugging option.
3. Launch the music application on the phone and enjoy.

HIFIMAN Limited Warranty

EF500 is warranted for a period of one year beginning with the original date of purchase. If you join the official HIFIMAN group on Facebook, your product warranty will be extended for an additional six months. Please contact HIFIMAN customer service if you need any assistance.

The dated sales or delivery receipt is your proof of purchase. You may be required to provide proof of purchase as a condition of receiving warranty service so please keep it handy.

If your product is under warranty and malfunctions occur, please contact HIFIMAN customer service or your authorized dealer. If necessary, and at the discretion of HIFIMAN, the company will provide a warranty repair or replacement of your product.

Caution: do not disassemble or modify the product in any way. Tampering with or modifying your HIFIMAN product will void its warranty.

This Limited Warranty does not apply to :

1. Defective or discolored parts if the damages are caused by fluids, dirt, missing keys, broken plastic parts or improper use.
2. Damage caused by misuse with another product.
3. Use of the product for other than its normal intended use, including, without limitation, failure to use the product in accordance with the supplied "Owner's Guide"
4. Damage caused by accident, abuse, neglect or misuse.
5. If you do not have a valid dated receipt showing proof of purchase.
6. Damage caused by services/repairs or other modifications to the system carried out by anyone other than HIFIMAN or an authorized HIFIMAN distributor or dealer.
7. Damage caused by self-repair or if the unit has been disassembled or modified in any way.

HIFIMAN guarantees your satisfaction and will do everything reasonable to achieve that. If you have any questions or concerns with your product, simply contact your authorized dealer or HIFIMAN directly (if purchased from us) and explain the issue in detail. Should a return be required, a RA# will be issued. Return shipping to HIFIMAN or authorized service facility will be at the owner's expense.

The warranty applies to the first purchaser and is not transferable. Should you need warranty service please contact your authorized HIFIMAN dealer. Or email us directly at customerservice@HIFIMAN.com

If you have any concerns with your product: please contact us to explain the issue in detail. If a return/refund is required, a RA# will be issued. Return shipping to HIFIMAN or authorized service facility is done at the owner's expense.

For any further information or questions, please contact your authorized HIFIMAN dealer. Or email us directly at customerservice@HIFIMAN.com.



facebook.com/hifimanelectronics



twitter.com/hifimanofficial



www.hifiman.com

HIFIMAN ELECTRONICS CORPORATION

Address: 2602 Beltagh Ave, Bellmore, NY 11710, USA



1. Correct disposing of waste electrical and electronic equipment (WEEE) and symbol of the “crossed-out wheeled bin”

The crossed-out wheeled bin on WEEE means that you are obliged by law to dispose of this equipment separately from the unsorted municipal waste collection system.

Disposing of it in the residual waste bin, the yellow bin or yellow bag for recyclable materials is legally prohibited. If the equipment contains portable batteries, accumulators or lamps that are not permanently installed, these must be removed before disposing of the product and be disposed of separately as waste portable batteries.

2. Ways of returning waste electrical and electronic equipment

Owners of waste electrical and electronic equipment can return them to those facilities for returning or collecting waste electrical and electronic equipment set up and provided by the public-sector waste disposal authorities or alternatively with collection points installed by producers, retailers or distant sellers to ensure that the waste electrical and electronic equipment is disposed of correctly. The following link leads to an online registry of the available collection and take-back sites: <https://e-schrott-entsorgen.org/>

3. Data privacy

We should point out to all end-users of waste electrical and electronic equipment that they themselves are responsible for deleting all personal data from the waste electrical and electronic equipment to be disposed of.



Innovating the Art of Listening

Customer Service Tel: 1- 201-443-4626

E-mail: customerservice@HIFIMAN.com

Website: www.HIFIMAN.com



FACEBOOK

Scan QR Code to join
HIFIMAN on facebook