

 HIFIMAN



RE400

Owner's Guide

# RE400 Care and Maintenance

Thank you for purchasing the HFIMAN RE400, a high performance, in-ear headphone designed to provide excellent sound quality and comfort while on the go. Years of painstaking research went into the design and engineering of your RE400 to provide you with many hours of trouble-free enjoyment. HFIMAN is one of the leading brands of high quality headphones, amplifiers and portable music players in the world.

## **Product Overview**

The RE400 can be used with most portable music devices (such as an iPod or smartphone) by using the standard mini-stereo plug. It can also be used in hifi systems by using the adapter, which can quickly convert the plug into a standard ¼" headphone jack. The multiple flanges supplied help provide exceptional comfort even when listening for extended periods.

## **Care and Maintenance**

Following a few simple tips can add to your listening enjoyment and lifespan of your earphones.

- When not in use, we recommend keeping your RE400 earphones in the supplied pouch.
- Never remove the earphones by pulling on the cable. This may cause damage to the cable and is not covered by warranty.
- Avoid hard impacts to your earphones or extreme temperatures.

# Features and Specifications

- Titanium-Coated 8.5mm drivers custom designed by HIFIMAN
- Compact size utilizing powerful Neodymium magnets
- Oxygen-Free Copper Cabling
- Advanced ergonomics for comfort and extended listening
- Stylish design and light weight
- 3.5mm mini plug
- Mini adapter for regular earphone jack
- Frequency Response: 15Hz-22kHz
- Impedance: 32  $\Omega$
- Sensitivity: 102 dB
- Rated: 10mW
- Weight: 0.45 oz (12.9g)

## **Package Contents**

- (4) Silicone Tips
- (1) Pair Bi-flange (small)
- (1) Pair Bi-flange (large)
- (1) Pair Mono-flange (small)
- (10) Filters
- (1) Earphone Carry Pouch

# How To Wear

Before using your earphones, make sure the volume is down on your device. There will be a small (R) and (L) on the black stress relief of the earphones denoting right and left.

Place earphone in your canal and using a gentle twisting motion push into your ear canal until you get a secure fit. The cable should exit straight down (fig.1). You may have to try different size ear tips to get the correct fit and level of comfort.

If you desire to wear the cable in the "over the ear" style (fig.2), follow the steps above, but the cable should exit to the top at a slight angle. You may need to adjust the angle to get the right level of comfort and secure fit.



fig.1 - Normal



fig.2 - Over the Ear

## Caution

- Please do not wear earphones while operating any type of vehicle.
- Use caution when using earphones while walking, jogging, cycling
- Listening at sustained high volumes may cause permanent damage to your hearing. Always listen at a lower volume.

# Product Warranty

HIFIMAN warrants this product to be free of defects in material or workmanship for a period of one year from the date of original retail purchase. If your product is found to be defective during the warranty period, HIFIMAN will, at its sole option, either repair the product or replace the product with a new or factory reconditioned or substantially equivalent model. This limited warranty does not apply to any defects attributable to damage beyond the reasonable control of HIFIMAN including damage caused by abuse, misuse, misapplication or modifications performed by anyone other than HIFIMAN.

## **Warranty Repairs**

If it becomes necessary to return your product to HIFIMAN for warranty or post-warranty service, please contact our customer service team to obtain an RA#. Return shipping to HIFIMAN or an authorized service facility is at the responsibility of the owner.

Please make sure to include a detailed description of the problem, the address we need to return your product to, your full name, phone number, email address and a copy of your purchase receipt.

For any further information or questions, please contact your authorized HIFIMAN dealer, or contact us directly by email at [customerservice@head-direct.com](mailto:customerservice@head-direct.com)

### **1. Correct disposing of waste electrical and electronic equipment (WEEE) and symbol of the “crossed-out wheeled bin”**

The crossed-out wheeled bin on WEEE means that you are obliged by law to dispose of this equipment separately from the unsorted municipal waste collection system. Disposing of it in the residual waste bin, the yellow bin or yellow bag for recyclable materials is legally prohibited. If the equipment contains portable batteries, accumulators or lamps that are not permanently installed, these must be removed before disposing of the product and be disposed of separately as waste portable batteries.

### **2. Ways of returning waste electrical and electronic equipment**

Owners of waste electrical and electronic equipment can return them to those facilities for returning or collecting waste electrical and electronic equipment set up and provided by the public-sector waste disposal authorities or alternatively with collection points installed by producers, retailers or distant sellers to ensure that the waste electrical and electronic equipment is disposed of correctly. The following link leads to an online registry of the available collection and take-back sites: <https://e-schrott-entsorgen.org/>

### **3. Data privacy**

We should point out to all end-users of waste electrical and electronic equipment that they themselves are responsible for deleting all personal data from the waste electrical and electronic equipment to be disposed of.

**WEEE Reg. No. DE 73830605**  
**WEEE Reg. No. DE 48150071**



## Connect With Us Online!



[facebook.com/hifimanelectronics](https://facebook.com/hifimanelectronics)



[twitter.com/hifimanofficial](https://twitter.com/hifimanofficial)



Scan QR Code to join  
HIFIMAN on Facebook

Web: [hifiman.com](http://hifiman.com)

Phone: 1-201-HIFIMAN(443-4626)

Email: [customerservice@hifiman.com](mailto:customerservice@hifiman.com)