



HIFIMAN Wi-Fi Headphones Firmware Upgrade Procedure

1. Clear the network configuration, then reboot the headphones and enter Wi-Fi mode. Connect your host device to the headset's access point; the SSID should begin with "AP-HIFIMAN".


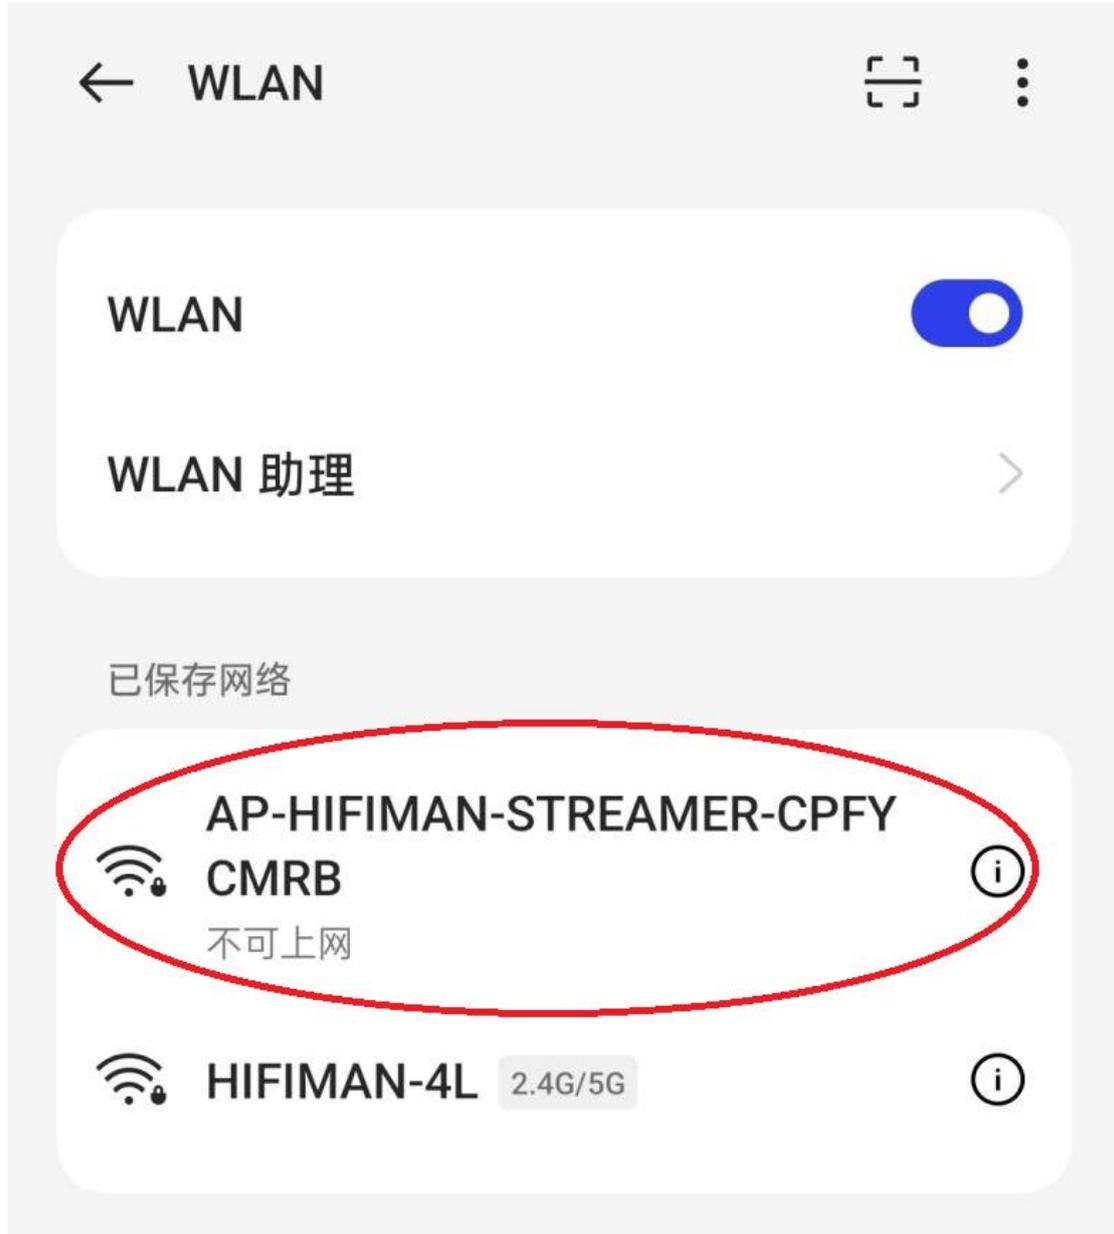


2. Open a web browser and navigate to <http://192.168.2.1>. From the left menu, select “**About**”, then click “**Manual Update**” on that page.

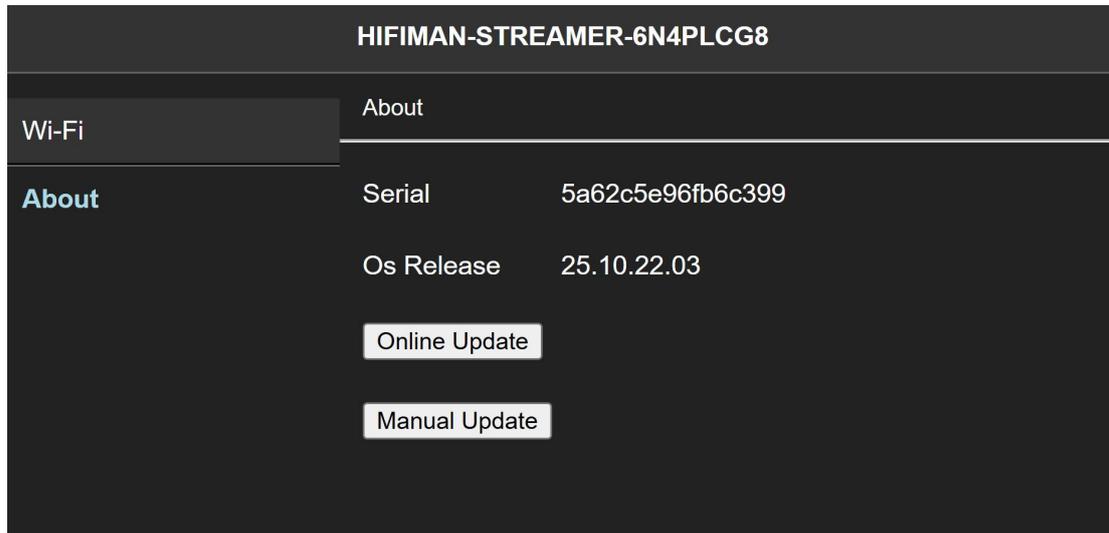

*(If an online firmware push is available, you may alternatively try “**Online Update**”.)*

3. Use the file selector to locate and import the firmware upgrade file from your file manager.

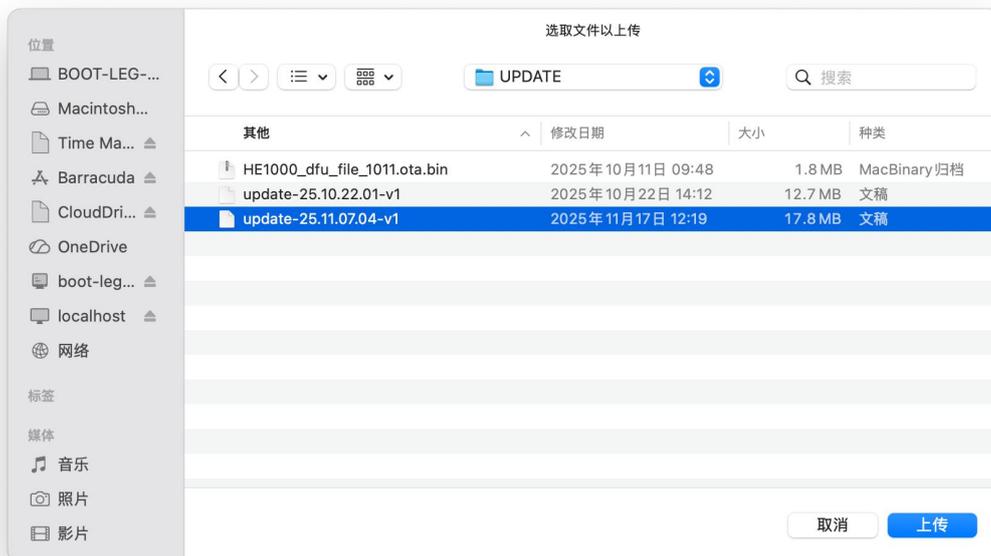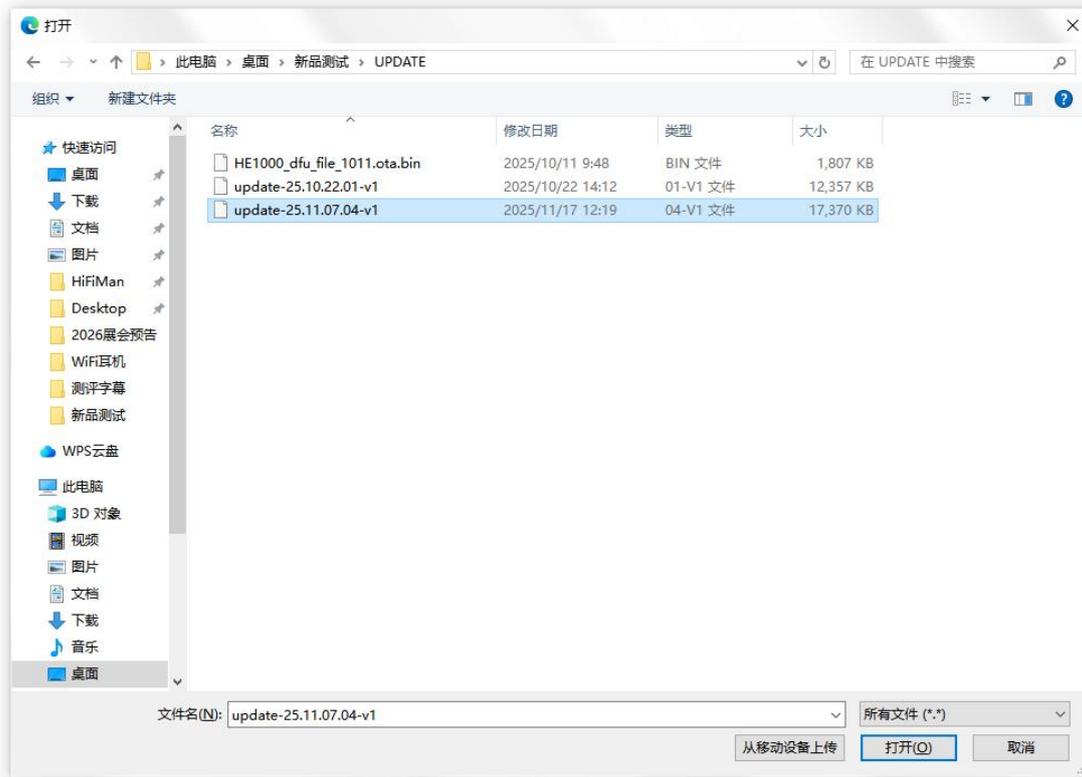

4. Wait approximately 1–2 minutes. When the message “**The upgrade is complete and the system is restarting!**” is displayed, the upgrade has finished. After the device restarts, reconfigure the network connection.

